

## GN042 | Windshield, Dash, or Console Pedestal for Garmin GPS



### Package Contents:

- (1) GN042 - 8" Flexible gooseneck windshield pedestal for Garmin Nüvi™ and StreetPilot™
- (1) AP013 - 80mm Adhesive dash or console disc
- (1) Alcohol pad

No Tools Required for installation.



Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.


### Compatible with Garmin®:

- Nüvi™ - 200, 200w, 250, 250w, 260, 260w, 270, 300, 310, 350, 360, 370, 600, 610, 650, 660, 670, 680, 710, 750, 760, 770, 780, 850, and 880 models
- StreetPilot™ - c310, c510, c530, c550, and c580 models

Garmin brand name and Nüvi and StreetPilot product names are trademarks or registered trademarks of Garmin International. Arkon Resources, Inc. is not affiliated with Garmin International.


### Windshield Installation Instructions

- Step 1. Clean windshield area with alcohol pad and let dry. Push the pedestal suction cup (A) firmly to the windshield. Flip the lever (B) down to secure the suction cup.

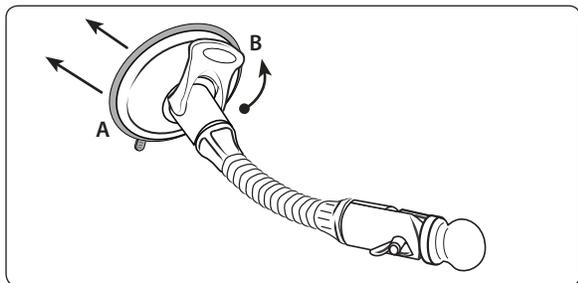


- Step 2. Adjust the angle of the gooseneck (C) by using both hands to bend to the desired position.

- Step 3. Carefully attach your cradle to the head by inserting the ball (D) into the Garmin cradle cavity (E) (Sold separately). Adjust the angle and of the head by loosening / tightening the wing nut (F).

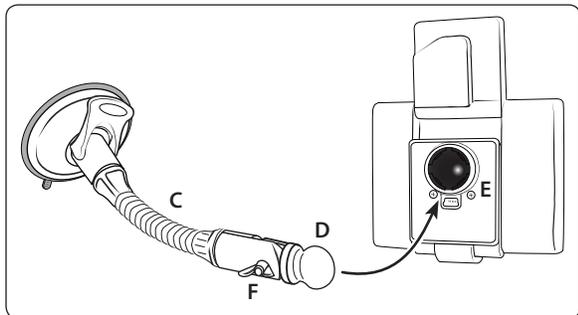

### Dash or Console Installation Instructions (Optional)

- Step 1. Choose the best location on vehicle to place the mount.
- Step 2. Clean off dash surface with alcohol cleaning pad and let dry. (A) Do not attempt application of the dash mount if the temperature is below 68° F (20°C).
- Step 3. Remove paper liner from adhesive on base (B) and affix adhesive to the dash. Let stand (at room temperature) for 24 hours before using.
- Step 4. Push the pedestal suction cup firmly to the disc. Flip the lever down to secure the suction cup.

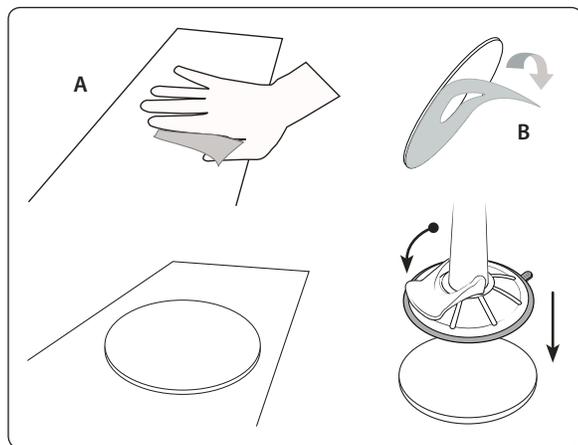

- Step 5. Follow Steps 2 and 3 of the Windshield Installation Instructions.



### Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and /or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

**ARKON**  
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

[www.arkon.com](http://www.arkon.com)

Arcadia, CA 91006 USA

Designed in USA | Made in Taiwan

© Copyright 2008 Arkon Resources, Inc.